

WIFI Module setup guide

How to set up the Wifi dongle?

1. Plug Wifi module to the RS232 port of the inverter. If the RS232 port has DIP switch, DIP1 should be set to 1;



- 2. Connect to the wireless network emitted by the Wifi module using your computer, the network name/SSID is the serial number of the Wifi dongle, default password is 12345678.
 - a. Click on the signal icon on desktop of your computer and click the SSID of the Wifi dongle(in red), then click the "Connect" button;



b. type in the default password(12345678) of the wireless network of the Wifi dongle, and click "OK";



Type the netwo	ork security key
Security key:	12345678
	Hide characters
	OK

c. Then your laptop will be successfully connected to the Wifi dongle.

Wireless Network Co	onnection
AH34916358	Connected
TALKTALK-46C798	1100
BTHub4-XHCH	100
BTWifi-X	100
SKY47883	Iter
Rojas Old Basing	100
BTWifi-with-FON	511
BTHub3-TS8Q	

3. After the connection is successfully established, open the web browser on your computer and type **192.168.10.100** in the address bar, then you will be prompted to enter user name and password to get into the setting interface of the Wifi module, both of them are "**admin**". After that you will enter the setting interface.

🗰 Apps 🚺 BENO 🛛 W Wikipedia, the free e 🗾 Downloads. SMA Au 🚺	VouTube	Authentication Required × PLC编程应注意し
		The server http://192.168.10.100.80 requires a username and password. The server says: Wifi Module. User Name:
	Relo	Password:



- C n	🗋 192.168.10.100/ua	art_config.html			[]
Apps BENO	W Wikipedia, the free e	🗾 Downloads. SMA Au 🖸 YouTu	be - Broadcas 🐧 人人网- 日志分享 🗃 国外-裁	曹挺fm在线收 🗋 PLC编程应注意七大	AUTO CAD 常用
				中文 English	
		UART Setting			
		AP Interface Setting	Uart Setting		
		📫 CTA Interface Catting			
		- STAthleriace Setting	Uart Setting	e ¹	ļ.
		System Management	UART TX Baudrate (9100~17900)	9600	
			UART RX Baudrate(9100~17900)	9600	
			Data Bits	8	
			Parity	None	
			Stop	1	
			CTSRTS	Disable	
			Data Transparent Mode	Agreement Transmission Mode	

4. Check the connection between Wifi dongle and your inverter.

Switch to "UART Setting" page, check the parameters "**Device Quantity**" under "UART Setting" tab. If the communication between the inverter and Wifi dongel is Okay, the value will be 1, but if the value is 0, please check the connection between the inverter and Wifi module;

UART Setting		
AP Interface Setting	Uart Setting	
STA Interface Setting		
	Uart Setting	
System Management	UARTTX Bandrate (9100-17900)	9600
	UART RX Baudrate(9100~17900)	9600
	Data Bits	8
	Parity	None
	Stop	1
	CTSRTS	Disable
	Data Transparent Mode	Agreement Transmission Mode
	Device Quantity	4

- 5. Then we will set the communication between the Wifi module and your wireless router.
 - a. Switch to "STA Interface Setting" page, Click the "Search" button under "STA Interface Parameters" Tab,



AP Interface Setting	STA Interface Set	ting	
<u>In Interface betting</u>			
STA Interface Setting			
	STA Interface Parameters		Search Clear
System Management	Ar s sold	OBEN	Search
	Security Mode	UPEN V	
	Encryption Type	NONE V	
	Connection State	No Setting	
		Apply Cancel	
	DHCP Mode		
	DHCP Mode MAC	AC:CF:23:06:44:D1	
	DHCP Mode MAC WAN Connection Type	AC:CF:23:06:44:D1	
	DHCP Mode MAC WAN Connection Type IP Address	AC:CF:23:06:44:D1 DHCP(Auto config) •	
	DHCP Mode MAC WAN Connection Type IP Address Subnet Mask	AC:CF:23:06:44:D1 DHCP(Auto config) ▼ 0.0.0.0 0.0.0.0	
	DHCP Mode MAC WAN Connection Type IP Address Subnet Mask Default Gateway	AC:CF:23:06:44:D1 DHCP(Auto config) ▼ 0.0.0.0 0.0.0.0 0.0.0.0	
	DHCP Mode MAC WAN Connection Type IP Address Subnet Mask Default Gateway	AC:CF:23:06:44:D1 DHCP(Auto config) 0.0.0 0.0.0 0.0.0 0.0.0 Apply Cancel	
	DHCP Mode MAC WAN Connection Type IP Address Subnet Mask Default Gateway	AC:CF:23:06:44:D1 DHCP(Auto config) 0.0.0.0 0.0.0.0 0.0.0.0 Apply Cancel	
	DHCP Mode MAC WAN Connection Type IP Address Subnet Mask Default Gateway Network Setting	AC:CF:23:06:44:D1 DHCP(Auto config) 0.0.0.0 0.0.0.0 0.0.0.0 Apply Cancel	
	DHCP Mode MAC WAN Connection Type IP Address Subnet Mask Default Gateway Network Setting Server Address (IP Address of	AC:CF:23:06:44:D1 DHCP(Auto config) ▼ 0.0.0.0 0.0.0.0 0.0.0.0 Apply Cancel or Domain Name) server.growa	att.com

b. a dialog window will pop up showing all the wireless network nearby, select the wireless network of your home router, then click "**Apply**".

C	M	2M Web Serve	er - Google Chror	ne						X	×	<u>Ъ</u> М2М	We × V	යා http	os://v ×	🛛 🖾 Sp	onsor: >	د 🔨 🖽 ht
Γ	1	92.168.10.	100/site_surv	/ey.htm	ป					Q								
F	-			-							淳 🖷	国外-蜡	艇fm在绘	載收	P PLC	扁程应注	意七大	AUT
	Site No	Survey te: In a general	way,the number of	f clients(si	uch as PC	. mobile ph	one, Wi-Fi Mod	ule and										
	etc)linked to the s	ame wireless route	r should b	e less tha	n 10.												
		SSID	BSSID	RSSI	Channel	Encryption	Authentication	Network Type							- <u>+</u>	-	link	
		BTHub3-G6P9	00:03:d8:0c:bd:82	0%	1	TKIP	WPA2PSK	Infrastructure							ΨX	Eng	lisn	
		BTHub5- RFR2	00:f2:01:50:7b:1a	15%	1	ТКІР	WPA2PSK	Infrastructure			. Cotti	na						
		TALKTALK- 46C798	d0:2d:b3:46:c7:a0	100%	1	TKIP	WPA2PSK	Infrastructure			e Setti	ng						
		BTWifi-with- FON	42:f2:01:50:7b:1a	15%	1	NONE	OPEN	Infrastructure										
		BTWifi-X	22:03:d8:0c:bd:82	5%	1	TKIP	WPA2PSK	Infrastructure			ers							
		BTWifi-X	62:f2:01:50:7b:1a	5%	1	TKIP	WPA2PSK	Infrastructure								Sea	arch	lear
		BTWifi-with- FON	02:03:d8:0c:bd:82	5%	1	NONE	OPEN	Infrastructure				0	PEN	T				
		CliveNetUK	bc:ae:c5:c3:72:b9	15%	4	AES	WPA2PSK	Infrastructure				N	ONE 🔻					
		SKY47883	7c:4c:a5:e6:12:75	50%	6	AES	WPA2PSK	Infrastructure				No	Setting					
		NaszaChalupa	00:26:b0:fe:09:ed	5%	6	AES	WPA2PSK	Infrastructure				Ap	ply C	ancel				
		BrightBox- pcsre3	50:7e:5d:02:f0:19	0%	11	TKIP	WPA2PSK	Infrastructure										
		BTHub3- TS8Q	00:fe:f4:6a:15:b8	15%	11	TKIP	WPA2PSK	Infrastructure										
		BTWifi-with- FON	42:f2:01:25:a9:18	5%	11	NONE	OPEN	Infrastructure				AC	:CF:23:06	:44:D1) •			_
		BTWifi-with- FON	02:fe:f4:6a:15:b8	20%	11	NONE	OPEN	Infrastructure			-	0.0	.0.0	o oonig				
	0	BTWifi-X	62:f2:01:25:a9:18	5%	11	TKIP	WPA2PSK	Infrastructure				0.0	.0.0					
		BTHub3- QQC2	80:b6:86:6b:24:7a	0%	11	TKIP	WPA2PSK	Infrastructure				0.0	.0.0					
		BTWifi-X	22:fe:f4:6a:15:b8	0%	11	TKIP	WPA2PSK	Infrastructure				Ap	ply C	ancel				
	App	ly Refresh		•														
											ldress or	Domai	n Name)	server	.growatt.o	com		
											ite			Disconn	nected			
												Ap	ply C	ancel				
L									 									

c. Enter the WIFI password of your home wireless network in the "Pass Phrase" field, click "Apply";



<u>UART Setting</u> <u>AP Interface Setting</u> <u>STA Interface Setting</u> <u>System Management</u>

	中文	English
STA Interface Setting	9	
STA Interface Parameters		
AP's SSID	TALKTALK-46C798	Search Clear
Security Mode	WPA2PSK V	
Encryption Type	TKIP V	
Pass Phrase(8~32 Characters)	CJ	
Connection State	No Setting	
	Apply Cancel	

DHCP Mode	
MAC	AC:CF:23:06:44:D1
WAN Connection Type	DHCP(Auto config) V
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
	Apply Cancel

Network Setting					
Server Address(IP Address or Domain Name)	server.growatt.com				
Server Connection State	Disconnected				
Apply	ancel				

d. You'll be prompted to restart the Wifi dongle to make the setting take effect, click "Restart Immediately";

	 <u>UART Setting</u> <u>AP Interface Setting</u> <u>STA Interface Setting</u> System Management 	中文 English Set Successfully, Restart to use new setting Restart Immediately
--	---	---

e. There will be a progress bar showing the restarting progress. If the progress bar just stands still and doesn't move, please wait about 1 minute, then reload the page, switch to "STA Setting" page to check whether the connection between the Wifi dongle and your wireless router has been established;

$\leftarrow \Rightarrow$	G	f	192.168.10.100/restart.html						
Apps	P	BENO	${\rm W}$ Wikipedia, the free e	🗾 Downloads. SMA Au	YouTube -				
Reboot	ing								
Rebooting. 0%									



f. If the connection to router is Okay, the Connection State will become "**connected**". And the Wifi dongle will connect to our Shine Server automatically(status shown in red frame).

Carl and a constraining			
STA Interface Setting	STA Interface Parameters		
System Management	AP's SSID	TALKTALK-46C798	Search Clear
	Security Mode	WPA2PSK Y	
	Encryption Type	TKIP .	
	Pass Phrase(8-32 Characters)	CJ	
	Connection State	Connected	
		Apply Cancel	
	DHCP Mode	AC-CE-23-08-44-D1	
	DHCP Mode	AC-CE-23-06-44-D4	
	MAC	A0.01.20.00.44.01	
	MAC WAN Connection Type	DHCP(Auto config) *	
	MAC WAN Connection Type IP Address	DHCP(Auto config) 192.168.1.10	
	MAC WAN Connection Type IP Address Subnet Mask	DHCP(Auto config) 192.168.1.10 255.255.255.0	
	MAC WAN Connection Type IP Address Subnet Mask Default Gateway	DHCP(Auto config) 192.168.1.10 255.255.255.0 192.168.1.1	

For Step a-f, You can have a short cut road and use an android mobile app (ShineSmart.apk) to setup the WIFI dongle.

Run the software on an Android phone, it will search and connect to the WIFI dongle automatically in the "Select a method to search WI-FI Module" section. Then you just need to click "Select" in the next section to search and select your home WIFI, enter the password and click "Setting", most of the time it will show "setting successful" at the bottom. Then the setup of connection to router is done, and you can use laptop computer to log in dongle (<u>http://192.168.10.100</u>) to obtain the 'Check Code'. Finally, You'll just need to create an account on the server portal.





- 6. Then sign up an account on Shine Server, and register your Wifi module on it.
 - a. Switch to "System Management" tab, record **Serial Number** and **Check Code** of the Wifi module for Shine Server account registration;

ILART Catting		中文 English]
VART Setting	System Management		
AP Interface Setting	bystern management		
STA Interface Setting	Draduat Information		
	Product mormation		
System Management	Version	2.0	
	Serial Number	AH34916358	
	Check Code	4C111	
-			
	Production Setting		
	Data Transfer Interval	5Minutes	
	Monitor Mode	Single Mode	
	Time Zone	GMT+8 ▼	
		Apply Cancel	
	Adminstrator Settings		
	Account	admin	
	Password	admin	
		Apply Cancel	

b. Enter "server.growatt.com" in your web browser, and click "Register" in Shine Server portal;

User Login	Information		Power distribution
User name:			Total of Station:
			Total of Energy: 998
Password:	- 1.5	E	Reimbursement: 9980
	7.3	G	Reduced CO2:
Validate code:	G		Example plants
CL 6 8			User need not login
Login Register		T . Arts	example plants.
Forget password?	G		Current Data、History Chart
			Plant Data、Plant Analysis Click to view
Shine server IOS APP	The second se	Choose Growatt	Notice
		Choose golden service 7 X 24 global on line support	Reduce Co
			652ka
	User Login User name : Password : Validate code : CL 6 8 Login Register Forget password ?	User Login User name: Password: Validate code: CL 6 8 Login Register Forget password?	User Login User name: Password: Validate code: CL 6 8 Login Register Forget: password? Choose Grewatt Choo

c. Enter all the required information in the register window, then click "Register";



> C file Server.growatt.com/register.do				
Apps 📔 BENO 🛛 W Wikipedia, the free e 🗾 Downloads. SMA Au	YouTube - Broadcas 《 人人网-日志分享 圖 图外- 轉艇fm	在线收 [)PLC编程应注意七大…	AUTO
	Register			
	User name			
	cnDarcy	1		
	Password			
	Password repeat			
	Email			
* * *	dustin.du@ginverter.com	*		
A 五 五 去 去 +	Company name			
A A A A A A	Growatt New Energy Comany			
	Tel phone			
	+8675527471942			
	Data logger SN		100.000	
	AH34916358		A REAL PROPERTY.	
	Data logger verification code		to a loss	
	4C111		1111	
	Time zone		1/////	
f	GMT +0 •			11
	Language			11
	English		1 1 1 1	- 1
	Validate code		500250025002500	1002500
				(£) (£)
	I have read and agree <u>« Terms of Use</u> »			
	Back Login			f f

d. Then it'll jump into the home page of Shine Server, click "New plant" in the middle of the window;

Growatt	ShineServer								mDarcy (Setting 1	Dawnioad	Helo
pen All Close All	All plant													
nt List Undefined plant		0.2 -					Monthly	energy of	all plants	[kWh]			Energy[kWh]	
		0,1 -												
		0	0	0	0	0	0	0	0	0	0	0	0	
			2013.12	2014.01	2014.02	2014.03	2014.04	2014.05	2014.06	2014.07	2014.08	2014.09	2014,10	2014.
		-	T Hew pa	Plant na	ıme		Country	1	City		To	tal energy(kWh)	
				Undefined	plant		null		null			0.0		

e. Enter the plant information in the "New plant" page, click the serial number(in red frame) of the Wifi dongle at the bottom, then click the blue arrow to move it to the "selected" area, click "Save";
 Note: The three pictures below are from the same page



Apps 🔛 BENO W Wikipedi	a, the free e 🗾 Down	loads. SMA Au 🖸 YouTube - Broadcas 🚺 人人网-	日志分享 🗃	国外-蜻蜓	fm在线收…	PLC编程	应注意七大…
Growatt	ShineServer 2.5.0.6				≪ 4 Welcome:	: cnDarcy	
Open All Close All	All plant						
Plant List		New plant					
Undefined plant		1.Set installation info					
E- V AH34916358		Plant name:			*		
L 😑 BD34011252		Installation date:			*		
		System power(Wp):					
		Designer:		*			
		2.Set location					
		Country:					
		City:					
		Time zone:	GMT +0 ▼	*			
		East longitude:	•	1			
		North latitude:	•				
		3.Set income formula(Set 1kwh as the conversion	standard)				
		Capital income:	1.20		RMB(¥) ▼		
		Standard coal saved(kg):	0.400				
		CO2 emission reduced(kg):	0.997				
		SO ₂ emission reduced(kg):	0.030				
		4. Set plant profile					
		Images of plant:	Choose File	No file cho	sen		

C						🌃 Ca 🗰 Ea 🚺
Growatt	ShineServer 2.5.0.6			📢 Welcome: cnDan		
	All plant					
Open All Close All		Installation date	2014-11-18			
ant List		System power(Wp)	2000	•		
ndefined plant VI AHR4016858		Designer	Dustin	•		
Inverter		2.Set location				
BD34011252		Country	UK			
		City	: Oxford			
		Time zone	GMT +0	r *		
		East longitude	· ·			
		North latitude	· · · ·			
		3.Set income formula(Set 1kwh as the conversion sta	ndard)			
		Capital income	0.15	GBP(£) ▼		
		Standard coal saved(kg)	.400			
	•	CO ₂ emission reduced(kg)	0.997			
		SO ₂ emission reduced(kg)	: 0.030			
		4.Set plant profile				
		Images of plant	Choose File	No file chosen		
		5. Select data logger				
		Unselected	Selected			
		AH3H916359			×	
			Save			

C					📟 Cn 🐽 Xn 🚺
Growatt	ShineServer 2.5.0.6			come: cnDarcy (Normal user)	
	All plant				
Open All Close All		Installation date:	2014-11-18		
Plant List		System power(Wp):	2000		
Undefined plant		Designer:	Dustin	•	
3-010 AH34916358		2.Set location			
BD34011252		Country:	UK		
		City:	Oxford		
		Time zone:	GMT +0 *		
		East longitude:	• •	-	
		North latitude:		-	
		3.Set income formula(Set 1kwh as the conversion stand	lard)		
		Capital income:	0.15	GBP(♠) ▼	
		Standard coal saved(kg):	0.400		
	4	CO2 emission reduced(kg):	0.997		
		SO ₂ emission reduced(kg):	0.030		
		4.Set plant profile			
		Images of plant:	Choose File No file	chosen	
		5.Select data logger			
		Unselected	Selected		
			AH34916358		
			3		
		•			
		· · · · · · · · · · · · · · · · · · ·		*	
		52	ave		

7. After that, all the setting is done. The data will be uploaded to the Shine Server every 5 minutes.



arowatt	ShineServer 2.										nDarcy			Setting 1	Download	HO	
All Close All	All plant																l
atin AH34916358 Inverter		0.2					Monthly	energy of	all plants	[kWh]		E	nergy[kWh]				
		0.1-															
		0	0	0	0	0	0	0	0	0	0	0	0	0			
		2	New pla	ant	2014.02	2014.03	2014.04	2014.05	2014.06	2014.07	2014.08	2014.09	2014.10	2019.11			
				Plant nam	e		Country		City		Tot	al energy(k	Wh)				
				Dustin			UK		Oxford			0.0					

How to add WIFI dongle to your existing plant?

If you have more than one Wifi dongles and you want to put them all in one account and plant:

a. Sign in the Shine Server with your account, click "Setting" on the top right hand side of the home page;

C														💴 Cn 🗰 En (📲 Pri 🚺 Jp	•••
Growatt	ShineServer 2									e: cnDar	cy (Nor		Setti	ng Downloa		
Open All Close All	All plant															
Plant List Dustin - MAI A14916358 - MAI A14916358		0.2					Monthly	ener	gy of all pl	ants[kWh]	Energ	ıy[kWh]]
● BD34011252		0.1-														
		0-	0	0	0	0	0		0	0	0	0	0	0	0	
			2013.12	2014.01 t	2014.02	2014.03	2014.04	2014	4.05 201	4.06 2	014.07	2014.08	2014.09	2014.10	2014.11	
				Plant name			Country		City			Tot	al energy()	(Wh)		
				Dustin			UK		Oxford	i i			0.0			
				2.000					0.001	-			2.0			

b. Click "Device management" tab in the left column and select "**Data logger**", then click "**Add**" on the top left hand side;

Ground											💴 Cn 🗰 Er	💷 201 💌 30 💶	It
Growall	S								4 Welcome: cnDaro		Home Downl	oad Help	Exit
Setting		Data	a logger list	🛉 Add									
 User manage 		No.	SN	Alias	Туре	User name	Connection status	Group	IP address & Port NO	Data update interval	Device address range	Firmware version	Operate
 Plant management 		1	AH34916358	AH34916358	ShineWifiBox	cnDarcy	Lost		/92.25.243.25:1671	5	[1, 32]	2.0.0.0	۵ í
- Device management													
» Data logger													
Inverter													
Environment monitor													
Smart electric-meter													
Convergence box													
 Warning setting 													
 System Settings 													

c. Enter the serial number and Check code of the Wifi dongle, click "Save". Then all the setting is complete.



Data logger registrati	on										
	Data logger SN:		*								
	Data logger security code:		*								
	Plant for the data logger:	Dustin 🔻]								
	Save Cancel										

How to edit Plant information?

Growatt	ShineSener 2.5.0.6 • • • • • • • • • • • • • • • • • • •									Setting	Cn 🎬 En 📑 Er 🚺 .				
Open All Close All 	All plant	0.2	Monthly energy of all plants[kWh]												
⊡-¶Inverter BD34011252		0.1													
		0	0	0 2014.01	0 2014.02	0 2014.03	0 2014.04	0 2014.05	0 2014.06	0 2014.07	0 2014.08	0 2014.09	0 2014.10	0 2014.11	
			🛉 New plan	t											
			Plant name				Country		City		Total energy(kWh)				
			Dustin			UK			Oxford		0.0				

Growatt								🞦 Cn 🎇 En 🚺 Fr 💽 Jy	
Giowatt	ShineServer 2.5.0.6					≪ 4 Welcome:	cnDarcy	(Normal user)	ome Download Help
Setting	÷	New p	lant						
 User manage 		No.	Plant name	Owner user	Browse account	Country	City	Total energy(kWh)	Operate
 Plant management 		9399	Dustin	cnDarcy		UK	Oxford	0.0	🗣 🕼 🗊
» Plant information list 1									2
 Device management 									
 Warning setting 									
 System Settings 									

C					💴 Cn 🛒 En 🚺 Fr
Growatt	ShineServer 2.5.0.6		≪ ¶ Welco	me: cnDarcy (Normal user)	
Setting		Edit plant info			Cancel
 User manage 		1 Set installation info			
 Plant management 		Plant name:	Dustin	*	
» Plant information list		Installation date:	2014-11-18	•	
 Device management 		System power(Wp):	2000	*	
 Device management 		Designer:	Dustin	2	
 Warning setting 		2.Set location		1	
 System Settings 		Country:	UK		
		City:	Oxford		
		lime zone:	GMI+0 V		
		East longitude:			
	•	3 Set income formula/Set 1kwh as the conversion standa			
		Capital income:	0.15	GBP(A) V	
		Standard coal saved(kg):	0.4		
		CO ₂ emission reduced(kg):	0.997		
		SO ₂ emission reduced(kg):	0.03		
		4. Set plant profile			
		Images of plant:	Choose File No file ch	osen	
		5.Select data logger			
		Unselected	Selected		
			AH34916358	*	
		Copyright © 2012 GROWATT NEW ENERGY TECH	NOLOGY CO.,LTD Resolu	tion: 1024x768	

How to delete Wifi module on Shine Server?



If you inadvertently set a wrong parameter or you just installed a new Wifi dongle to replace the old one, you'll need to know how to delete the Wifi dongle.

Growatt	ShineServer	2.5.0.6					📢 Welcome	e: cnDarcy (Normal u	user) Settin	G The second sec	Escit	
Open All Close All ↓ Plant List ⊕ Ductin ⊕ ¶(A14940538 ⊕ ↓ Inverter ⊕ 8034011252	All plant	0.2	0	0 0	0 2014.03	0 2014.04 2014.						
		∳ N	ew plant Plant n	ame	Co	ountry	City		Total energy(k	Wh)		
			Dusti	n		UK	Oxford		0.0			
Growatt	ShineS	erver 2.5.0.6						≪ i Welcome: cnDar o	C y (Normal user)	Home Down	o 🛄 Fri 💽 Jy 🚺	it Exit
Setting	Da	ta logger list	🛉 Add									
 User manage 	No.	SN	Alias	Туре	User name	Connection status	Group	IP address & Port NO	Data update interval	Device address range	Firmware version	Operate
 Plant management 	1	AH34916358	AH34916358	ShineWifiBox	cnDarcy	Lost		/92.25.243.25:1671	5	[1, 32]	2.0.0.0	1
 Device management 												2
» Data logger 1 Inverter Environment monitor												
Smart electric-meter												
Convergence box												
 Warning setting 												
 System Settings 	1											
Growatt	Shines	Server 2.5.0.6						ৰ্থ Welcome: cnDa	rcy (Normal user)	Ben Ka Home Dov	En 🛄 Fri 💽 Jy I miload Help	lt Exit
Setting	Da	ta logger list	🛉 Add									
 User manage 	No.	SN	Alias	Туре	User name	Connection status	Group	IP address & Port NO	Data update interv	val Device address range	Firmware version	Operate
 Plant management 	1	AH34916358	AH34916358	ShineWifiBox	cnDarcy	Lost		/92.25.243.25:1671	5	[1, 32]	2.0.0.0	D 🗊
 Device management » Data logger Inverter 												
Environment monitor					These							
Smart electric-meter					Inemess	sage	-	*				
Convergence box						Delete this data lo	igger?					
 Warning setting 												
 System Settings 						Confi	m Can	cel				
Growatt	ShineS	erver 2.5.0.6						4 Welcome: cnDat	rcy (Normal user)	The second secon	Zn 🚺 Fri 💽 Jp 🚺 Nioad Hisip	It Exik
Setting												
Jest meno	Da	ta logger list	🛉 Add									
 User manage 	No.	SN Alias	s Type L	Jser name	Connection statu	s Group	IP address &	& Port NO Data	update interval	Device address range	Firmware version	Operate
 Plant management 							1					
 Device management 												
» Data logger												
Inverter												
Environment monitor												
Smart electric-meter												
Convergence box												
 vvarning setting 	•											
 System Settings 												

How to delete the Plant?



Plant information list

 Device management Warning setting System Settings

1

-										1		
Growatt	ShineServer 2.5							cnDarcy (No		Setting Download	Help Exit	
Open All Close All	All plant											
Plant List 		0.2			М	onthly ene	rgy of all plan	ts[kWh]	Ene	rgy[kWh]		
⊡ Inverter BD34011252		0.1										
		0 20	0	0 0 2014.01 2014.02	0 2014.03 201	0	0	0 0	0 2014.08	0 0 0 2014.10	0	
		🛖 N	lew plant									
			P	lant name	Countr	у	City		To	otal energy(kWh)		
				busun	- OK		CAUG			0.0		
<u>_</u>											🎦 Cn 🗰 En 🚺 Fr	💌 Jp 📲 I
Growatt	ShineServ	rer 2.5.0.6						📢 Welcome:	cnDarcy			
Setting		4	New pla	ant								
User manage			No.	Plant name	Owner user	Brows	e account	Country	City	Total energy(kWh)	Operate	
 Plant management 			9148	Dustin	cnDarcy			UK	Oxford	0.0	🛶 🕼 🔟	



Growatt	ShineServer 2.5.0.6			nija v	/elcome: cnDa	rcy (Norn	nal user) Home Do	😫 En 🚺 Fr 💽
Setting	🛉 Nev	v plant						
 User manage 	No.	Plant name	Owner user	Browse account	Country	City	Total energy(kWh)	Operate
 Plant management 				No plan	t!			
» Plant information list								
Device management								
Warning setting								
System Settings								



Granus											8	Cn 🗰 En 🚺	🛯 Fr 💽 Jy	II It
Growall	ShineServer 2.5.0.6							4 Welcome: CNI	Darcy (N					
Open All Close All	All plant													
🚠 Plant List						JY of all plants[kWh]					=±			
	0	2												
No plant!														
	0	1												
		0	0	0	0	0	0	0	0	0	0	0	0	
		0 2013.12	2014.01	2014.02	2014.03	2014.04	2014.05	2014.06	2014.07	2014.08	2014.09	2014.10	2014.11	
		🛖 New plant												
			Plant name	e		Country		City		Total energy(kWh)				
							N	o plant!						

If there is any problem during the Wifi dongle setting, please contact your installer or Growatt(<u>dustin.du@ginverter.com</u>) for assistance.